

DO NOT USE ANY TYPE OF BLEACH OR STAIN REMOVING CHEMICALS
BEFORE CUTTING / STITCHING. FABRIC SHOULD BE SOAKED BE SOAKED IN WATER
[ALL COMPONENTS SEPARATELY] FOR 15 MINUTES

DO NOT KEEP WET FABRIC IN TWISTED FROM IN ORDER TO AVOID COPY MRKS! WASH COLOURED AND WHITE FABRICS SEPARATELY

IDON PLOTUCE OF MODEDOTE TEMPEDOTIDE I DO NOT DOV CORDIC IN DIRECT CUNICUT






DO NOT USE ANY TYPE OF BLEACH OR STAIN REMOVING CHEMICALS
BEFORE CUTTING / STITCHING. FABRIC SHOULD BE SOAKED BE SOAKED IN WATER
[ALL COMPONENTS SEPARATELY] FOR 15 MINUTES

DO NOT KEEP WET FABRIC IN TWISTED FROM IN ORDER TO AVOID COPY MRKS! WASH COLOURED AND WHITE FABRICS SEPARATELY

IDON PLOTUCE OF MONEDOTE TEMPEDATIBE I NO NOT NOV COODIC IN DIDECT CHINICUT



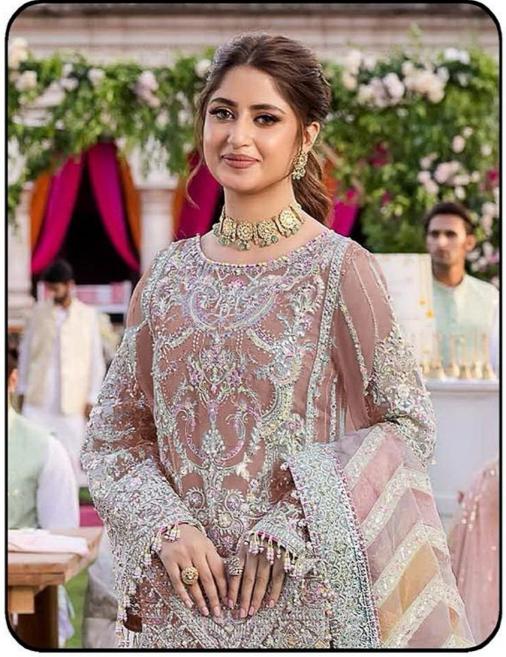


DO NOT USE ANY TYPE OF BLEACH OR STAIN REMOVING CHEMICALS Before Cutting / Stitching. Fabric should be soaked be soaked in water (all components separately ) for 15 minutes

DO NOT KEEP WET FABRIC IN TWISTED FROM IN ORDER TO AVOID COPY MRKS! WASH COLOURED AND WHITE FABRICS SEPARATELY

IDON PLOTUCE OF MODEDOTE TEMPEDOTIDE I DO NOT DOV CORDIC IN DIRECT CUNLICUT




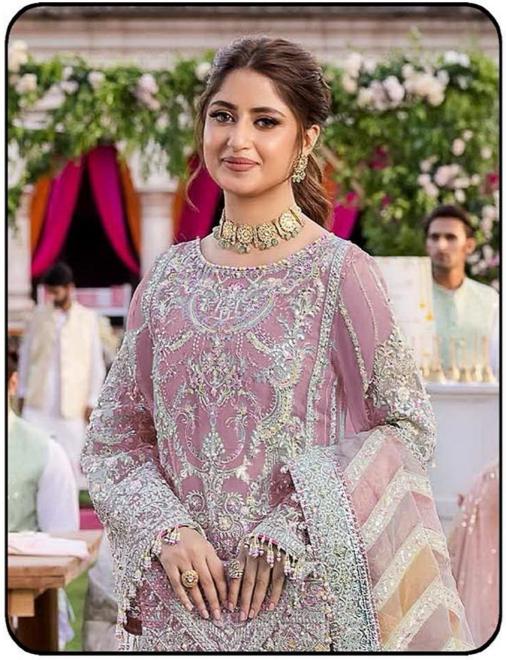

DO NOT USE ANY TYPE OF BLEACH OR STAIN REMOVING CHEMICALS
BEFORE CUTTING / STITCHING. FABRIC SHOULD BE SOAKED BE SOAKED IN WATER
[ALL COMPONENTS SEPARATELY] FOR 15 MINUTES

DO NOT KEEP WET FABRIC IN TWISTED FROM IN ORDER TO AVOID COPY MRKS! WASH COLOURED AND WHITE FABRICS SEPARATELY

IDON PLOTUCE OF MONEDOTE TEMPEDATIBE I NO NOT NOV COODIC IN DIDECT CHINICUT













D.NO.1484 F D.NO.1484 G D.NO.1484 H